

12-Second Voice Memo Keychain Recorder

OWNER'S MANUAL — Please read before using this equipment.


Your RadioShack 12-Second Voice Memo Keychain Recorder is compact and easy-to-use. You can record messages and play them back at work, school, or almost anywhere.

RECORDING A MESSAGE

1. Set **REC/PLAY/LOCK** to **REC**.
 2. To begin recording, hold down **REC/PLAY**. The record indicator lights.
 3. Speak into the microphone, holding it about 4 inches away from you. You can record for up to 12 seconds.
 4. Release **REC/PLAY** to stop recording. The record indicator turns off.
- Note:** When you have recorded for 12 seconds, the recorder automatically stops recording and the record indicator turns off.
5. Set **REC/PLAY/LOCK** switch to **LOCK**.

Repeat these steps to record another message.

Note: Once you have recorded for 12 seconds and played back the current messages, the only way to record new messages is to record over the old ones.

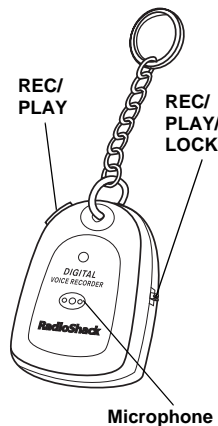

PLAYING MESSAGES

1. Set **REC/PLAY/LOCK** to **PLAY** and press **REC/PLAY**.
2. When playback is finished, set **REC/PLAY/LOCK** to **LOCK**.

REPLACING THE BATTERIES

Your recorder requires four button-cell batteries (supplied) to power the recorder.

If the sound becomes weak or distorted, or it stops operating properly, replace the batteries. The messages remain stored in memory even if the batteries are dead or removed.

Warnings:

- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

Caution: Use only fresh batteries of the required size and recommended type.

1. Use a small Phillips screwdriver to loosen the battery compartment cover's screw, then lift off the cover.
2. Remove the old batteries and install new batteries in the compartment according to the polarity symbols (+ and -) marked inside.
3. Replace the battery compartment door and tighten the screw to secure it.

CARE

Keep the recorder dry; if it gets wet, wipe it dry immediately. Use and store the recorder only in normal temperature environments. Handle the recorder carefully; do not drop it. Keep the recorder away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the recorder's internal components can cause a malfunction and might invalidate its warranty. If your recorder is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Power 4 × 1.5 V A76 button-cell batteries (6V)
(included)
Max Recording Time 12 seconds
Dimensions (HWD) $1\frac{15}{16} \times 1\frac{1}{4} \times \frac{5}{8}$ inches
(49 × 32.5 × 16 mm)
Weight 0.88 oz
(25 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99